

WSM

WORKSHOP MANUAL

**Z411KW-AU,
Z421KW-AU,
Z412KW-AU,Z422KW-AU**

Kubota

TO THE READER

This Workshop Manual tells the servicing personnel about the mechanism, servicing and maintenance of the Z411KW-AU, Z421KW-AU, Z412KW-AU, Z422KW-AU. It contains 4 parts: "Information", "General", "Mechanism", and "Servicing".

Information

This section primarily contains information below.

- Safety first
- Safety decal
- Specifications
- Dimensions

General

This section primarily contains information below.

- Engine identification
- Model identification
- General precautions
- Maintenance check list
- Check and maintenance
- Special tools

Mechanism

This section contains information on the structure and the function of the unit. Before you continue with the subsequent sections, make sure that you read this section.

Refer to the latest version of Workshop Manual (Code No. 9Y021-18200) for the *Tractor mechanism* that this Workshop Manual does not include.

Servicing

This section primarily contains information below.

- Troubleshooting
- Servicing specifications
- Tightening torques
- Checking, disassembling and servicing

All illustrations, photographs and specifications contained in this manual are of the newest information available at the time of publication.

Kubota reserves the right to change all information at any time without notice.

Since this manual includes many models, information or illustrations and photographs can show more than one model.

October 2017

© Kubota Corporation

RECORD OF REVISIONS

For pdf, use search function [Search word] to find all the revised locations.

Last digit of the code No.	Month of revision	Main revised point and corrective measure [Search word]	Reference page	
1	2019 February	Changed PTO switch starting with serial numbers: Z421KW-AU: 10040, Z411KW-AU: 10058	7-15	
		Changed starter switch starting with serial numbers: Z421KW-AU: 10191, Z411-AU: 10266	7-19	
		Added battery label starting with serial numbers: Z421KW-AU: 10301, Z411-AU: 10334	1-5	
2	2019 November	Horsepower changed	1-13	
		Added product identification number (PIN)	2-1	
3	2020 December	Added periodic service chart label	2-17	
		Added Z412KW and Z422KW model codes	—	
		Added product identification number information for Z411KW and Z421KW:	3-12	
		<ul style="list-style-type: none"> • Removing HST pulley • Loosening HST belt 	4-14	
		Added serial number breaks for RCK48P-400Z, RCK54-400Z, RCK60-400Z:	8-15	
		<ul style="list-style-type: none"> • Removing tension pulley and mower belt • Removing tension pulley and idler pulley • Removing blade • Removing blade shaft and pulley holder 	8-16 8-16 8-16 8-17	
Revised checking procedure for link stopper			6-5	
Added adjusting procedure for link stopper			6-5	

CONTENTS

1. INFORMATION

SAFETY FIRST.....	1-1
1. Before you start service	1-1
2. Start safely.....	1-1
3. Operate safely	1-2
4. Prevent a fire	1-2
5. Keep a good airflow in the work area	1-3
6. Discard fluids correctly	1-3
7. Prevent acid burns.....	1-3
8. Preparing for emergencies	1-3
SAFETY DECALS.....	1-5
1. Safety decals	1-5
2. Care of danger, warning and caution labels	1-12
SPECIFICATIONS	1-13
1. Specifications for model	1-13
2. Specifications for mower	1-16
DIMENSIONS	1-17

2. GENERAL

IDENTIFICATION.....	2-1
1. Serial number	2-1
2. Product identification number	2-1
GENERAL PRECAUTIONS.....	2-3
HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING.....	2-5
1. Handling of wiring	2-5
2. Battery	2-6
3. Handling of fuse.....	2-7
4. Connector	2-7
5. Handling of circuit tester	2-8
6. Wiring colors.....	2-8
LUBRICANTS AND FUEL.....	2-9
TIGHTENING TORQUES	2-11
1. General use screws, bolts, and nuts	2-11
2. Stud bolts.....	2-11
3. Hydraulic fittings	2-12
3.1 Hydraulic hose fittings	2-12
3.2 Hydraulic pipe cap nuts	2-12
3.3 Adapters, elbows, and others.....	2-13
4. Metric screws, bolts and nuts	2-14
5. American standard screws, bolts and nuts with UNC or UNF threads	2-14
6. Plugs.....	2-14
SERVICE INTERVALS	2-15
PERIODIC SERVICE CHART LABEL	2-17
CHECK AND MAINTENANCE.....	2-19
1. Daily check	2-19
1.1 Checking engine oil level	2-19
1.2 Checking amount of fuel and refueling.....	2-20
1.3 Checking and cleaning air intake screen	2-21
1.4 Checking transaxle fluid level.....	2-21
1.5 Checking tire pressure	2-22
1.6 Checking dial cam rotation force	2-22
1.7 Checking movable parts.....	2-23
2. Check points of every 25 hours	2-23
2.1 Cleaning cylinder head and cylinder head fins.....	2-23

2.2 Cleaning foam element	2-23
3. Check points of every 50 hours	2-24
3.1 Checking engine start system	2-24
3.2 Checking OPC system	2-25
3.3 Greasing.....	2-25
3.4 Checking muffler and spark arrester (if equipped)	2-26
4. Check points of every 100 hours	2-26
4.1 Changing engine oil	2-26
4.2 Cleaning air cleaner paper element	2-27
4.3 Checking spark plug.....	2-27
4.4 Checking fuel lines and fuel filter	2-28
4.5 Checking battery condition	2-29
4.6 Charging the battery.....	2-29
4.7 Storing the battery	2-30
4.8 Adjusting throttle cable	2-30
4.9 Adjusting choke cable	2-30
4.10 Greasing mower link bushings	2-31
5. Check points of every 200 hours or every 1 year	2-31
5.1 Replacing air cleaner paper element	2-31
6. Check points of every 200 hours	2-31
6.1 Replacing fuel filter.....	2-31
6.2 Replacing engine oil filter	2-31
7. Check points of every 300 hours	2-32
7.1 Checking and adjusting engine valve clearance	2-32
7.2 Cleaning combustion chambers.....	2-32
7.3 Cleaning and lapping engine valve seating surface	2-32
8. Check points of every 400 hours	2-32
8.1 Replacing transaxle oil filter	2-32
8.2 Purging transaxle	2-33
8.3 Changing transaxle fluid.....	2-34
9. Check points of every 500 hours	2-34
9.1 Replacing spark plug.....	2-34
9.2 Lubricating crank shaft	2-34
9.3 Lubricating crank shaft	2-34
10. Check points of every 500 hours or every 1 year	2-35
10.1 Adjusting electric clutch.....	2-35
11. Check points of every 1 year	2-36
11.1 Checking fuel lines and fuel filter.....	2-36
11.2 Checking muffler and spark arrester (if equipped)	2-37
11.3 Checking hydraulic hose	2-37
12. Check points of every 4 years	2-37
12.1 Replacing hydraulic hose	2-37
12.2 Replacing fuel line	2-37
13. Service as required.....	2-38
13.1 Replacing fuses.....	2-38
13.2 Checking and replacing blade	2-38
13.3 Replacing mower belt.....	2-39
SPECIAL TOOLS.....	2-41
1. Special tools for machine	2-41
1.1 Spanner wrench	2-41
2. Special tools for engine	2-41
2.1 Oil pressure tester.....	2-41
2.2 Compression tester	2-41
IMPLEMENT LIMITATIONS	2-43
3. ENGINE	
MECHANISM	3-1
1. Structure of engine	3-1

2. Fuel system	3-2
2.1 Structure of fuel system	3-2
3. Lubrication system.....	3-3
4. Cooling system	3-3
SERVICING	3-5
1. Troubleshooting for engine	3-5
2. Servicing specifications for engine	3-8
3. Tightening torques for engine	3-9
4. Checking and adjusting	3-10
5. Disassembling and assembling	3-10
5.1 Separating engine	3-10
5.1.1 Removing battery.....	3-10
5.1.2 Removing tension spring	3-10
5.1.3 Removing electric clutch.....	3-10
5.1.4 Removing HST pulley (Z411KW, Z421KW)	3-11
5.1.5 Removing HST pulley (Z411KW, Z421KW, Z412KW, Z422KW).....	3-12
5.1.6 Removing rear guard	3-13
5.1.7 Disconnecting fuel hoses.....	3-13
5.1.8 Disconnecting cables.....	3-14
5.1.9 Disconnecting wire harness	3-15
5.1.10 Removing engine	3-15
5.1.11 Removing muffler	3-16

4. TRANSAXLE

MECHANISM	4-1
1. Function of transaxle	4-1
2. Hydraulic circuit of transaxle.....	4-1
3. Structure of transaxle	4-2
3.1 Transaxle external components	4-3
3.1.1 Function of transaxle external components	4-3
3.2 Transaxle internal components	4-3
3.2.1 Function of transaxle internal components	4-3
4. Transaxle specification	4-4
5. Parking brake	4-5
5.1 Outline of parking brake	4-5
SERVICING	4-7
1. Troubleshooting for transaxle	4-7
2. Service specifications for transaxle	4-9
3. Tightening torques for transaxle	4-10
4. Checking and adjusting	4-11
4.1 Motion control lever.....	4-11
4.1.1 Adjusting HST neutral	4-11
4.1.2 Adjusting motion control lever operating force	4-11
4.1.3 Adjusting maximum speed.....	4-12
4.1.4 Adjusting motion control lever alignment	4-12
5. Disassembling and assembling	4-13
5.1 Separating transaxle	4-13
5.1.1 Removing rear wheel.....	4-13
5.1.2 Loosening HST belt (Z411KW, Z421KW)	4-13
5.1.3 Loosening HST belt (Z411KW, Z421KW, Z412KW, Z422KW).....	4-14
5.1.4 Disconnecting rods	4-14
5.1.5 Disconnecting hydraulic hose	4-15
5.1.6 Separating transaxle	4-15
5.2 Disassembling transaxle	4-16
5.2.1 Removing hub	4-16
5.2.2 Removing filter and filter guard	4-17
5.2.3 Removing control arm assembly	4-17
5.2.4 Removing fan and pulley	4-18

5.2.5 Removing brake arm assembly	4-18
5.2.6 Removing side cover	4-19
5.2.7 Removing bull, pinion, and reduction gears.....	4-20
5.2.8 Removing charge pump.....	4-20
5.2.9 Removing input shaft	4-21
5.2.10 Removing bypass arm	4-22
5.2.11 Removing swashplate	4-22
5.2.12 Removing center section ..	4-23
5.2.13 Removing cylinder blocks	4-24
5.2.14 Removing brake assembly	4-25
5.2.15 Removing axle shaft	4-25
5.3 Removing fuel tank	4-26
5.3.1 Removing battery.....	4-26
5.3.2 Removing seat.....	4-26
5.3.3 Removing R.H. fender	4-26
5.3.4 Removing front cover.....	4-27
5.3.5 Removing fuel tank	4-27
5.4 Removing ROPS	4-27
5.4.1 Removing battery.....	4-27
5.4.2 Removing seat.....	4-28
5.4.3 Removing R.H. fender	4-28
5.4.4 Loosening L.H. fender	4-28
5.4.5 Removing ROPS	4-29
5.5 Removing motion control lever.....	4-29
5.5.1 Removing battery.....	4-29
5.5.2 Removing seat.....	4-30
5.5.3 Removing motion control lever	4-30

5. FRONT AXLE

MECHANISM	5-1
1. Structure of front axle	5-1
SERVICING	5-3
1. Troubleshooting for front axle	5-3
2. Tightening torques for front axle	5-4
3. Disassembling and assembling	5-5
3.1 Separating front wheel and wheel bracket.....	5-5
3.1.1 Removing front wheel	5-5
3.1.2 Removing wheel bracket	5-5

6. LIFT SYSTEM

MECHANISM	6-1
1. Structure of lift system	6-1
SERVICING	6-3
1. Troubleshooting for lift system	6-3
2. Tightening torques for lift system	6-4
3. Checking and adjusting	6-5
3.1 Checking link stopper	6-5
3.2 Adjusting link stopper	6-5
4. Disassembling and assembling	6-6
4.1 Removing lift shafts	6-6
4.1.1 Removing mower	6-6
4.1.2 Removing link stopper	6-6
4.1.3 Removing cam	6-7
4.1.4 Removing lift shafts	6-7

7. ELECTRICAL SYSTEM

MECHANISM	7-1
1. Wiring diagram	7-1
2. Starting system.....	7-3

2.1 Electrical circuit of starting system	7-3
2.1.1 Safety switch.....	7-4
2.1.2 Relays	7-5
3. Charging system.....	7-7
3.1 Electrical circuit of charging system	7-7
3.2 Electrical circuit of gauge system	7-8
3.2.1 Hour meter	7-9
3.2.2 PTO clutch	7-9
3.2.3 PTO switch.....	7-9
SERVICING	7-11
1. Troubleshooting for electrical system	7-11
2. Service specifications for electrical system	7-13
3. Checking and adjusting	7-14
3.1 Battery.....	7-14
3.1.1 Checking battery voltage	7-14
3.1.2 Checking battery terminal connection.....	7-14
3.1.3 Checking battery specific gravity	7-14
3.2 Main switch	7-15
3.2.1 Checking connector voltage	7-15
3.2.2 Checking terminal continuity	7-15
3.3 Safety switches	7-16
3.3.1 Checking control of safety switches.....	7-16
3.3.2 Safety switch continuity test.....	7-18
3.3.3 Checking motion control lever switch continuity	7-18
3.3.4 Checking parking brake switch harness	7-18
3.3.5 Checking parking brake switch continuity	7-18
3.3.6 Checking PTO switch harness.....	7-19
3.3.7 Checking PTO switch continuity	7-19
3.3.8 Checking seat switch harness	7-20
3.3.9 Checking seat switch continuity	7-21
3.4 Electric PTO clutch.....	7-21
3.4.1 Checking electric PTO clutch (Coil resistance).....	7-21
3.4.2 Checking electric PTO clutch (Electromagnetic action).....	7-21
3.4.3 Checking electric PTO clutch clearance	7-21
3.5 Relays	7-22
3.5.1 Checking relay	7-22
3.6 Hour meter	7-23
3.6.1 Checking hour meter harness	7-23
3.6.2 Checking hour meter terminal continuity	7-23
3.7 12 V outlet.....	7-24
3.7.1 Checking 12 V outlet harness	7-24
3.7.2 Checking 12 V outlet terminal continuity.....	7-24
4. Disassembling and assembling	7-25
4.1 Disassembling electric PTO clutch.....	7-25
8. MOWER	
MECHANISM	8-1
1. Structure for mower	8-1
2. Power transmission flow for mower	8-4
SERVICING	8-5
1. Troubleshooting for mower	8-5
2. Service specifications for mower	8-7
3. Tightening torques for mower	8-8
4. Checking and adjusting	8-9
4.1 Leveling mower deck	8-9
4.1.1 Adjusting anti-scalp rollers	8-9
4.1.2 Checking mower deck level (side-to-side)	8-9
4.1.3 Adjusting mower deck level (side-to-side)	8-10

4.1.4 Checking mower deck level (front-to-rear).....	8-10
4.1.5 Adjusting mower deck level (front-to-rear).....	8-11
5. Disassembling and assembling	8-12
5.1 Dismounting mower deck	8-12
5.1.1 Locking lift link	8-12
5.1.2 Removing mower belt	8-12
5.1.3 Disconnecting lift link	8-12
5.2 Mounting mower deck	8-13
5.2.1 Locking and connecting lift link	8-13
5.2.2 Installing mower belt	8-14
5.3 Disassembling mower deck	8-15
5.3.1 Removing tension pulley and mower belt	8-15
5.3.2 Removing tension pulley and mower belt (RCK48P-400Z: 20548, RCK54P-400Z: 29036)	8-15
5.3.3 Removing tension arm and idler pulleys	8-15
5.3.4 Removing tension arm and idler pulley (RCK48P-400Z: 20548, RCK54P-400Z: 29036)	8-16
5.3.5 Removing blade	8-16
5.3.6 Removing blade shaft and pulley holder	8-17
5.3.7 Removing front plates	8-18
5.3.8 Removing gauge wheel	8-18
5.3.9 Removing anti-scalp roller	8-19

1. INFORMATION

SAFETY FIRST

⚠ SAFETY FIRST

- This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully.
- It is essential that you read the instructions and safety regulations before you try to repair or use this unit.

⚠ DANGER

- Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

- Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

- Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.


■ IMPORTANT

- Indicates that equipment or property damage could result if instructions are not followed.

■ NOTE


- Gives helpful information.

1. Before you start service

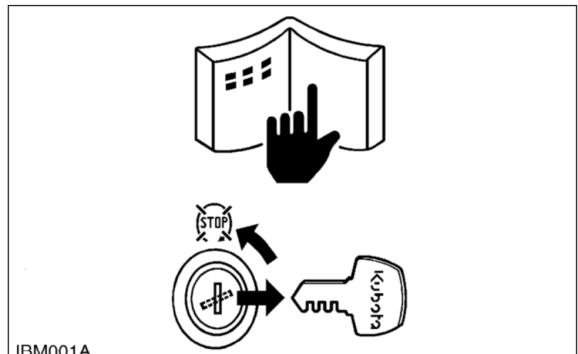

- Read all instructions and safety instructions in this manual and on your machine safety decals.
- Clean the work area and machine.
- Park the machine on a stable and level ground, and set the parking brake.
- Lower the implement to the ground.
- Stop the engine, then remove the key.
- Disconnect the battery negative cable.
- Hang a [DO NOT OPERATE] tag in the operator station.

2. Start safely

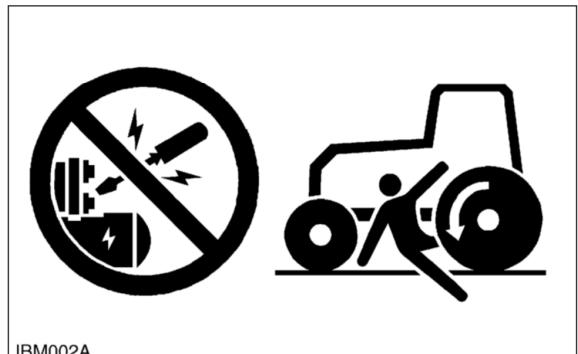




- Do not do the procedures below when you start the engine.
 1. Short across starter terminals.
 2. Bypass the safety start switch.
- Do not alter or remove any part of machine safety system.
- Before you start the engine, make sure that all shift levers are in neutral positions or in disengaged positions.

1. INFORMATION

SAFETY FIRST
3. Operate safely

- Do not start the engine when you stay on the ground. Start the engine only from operator's seat.


3. Operate safely

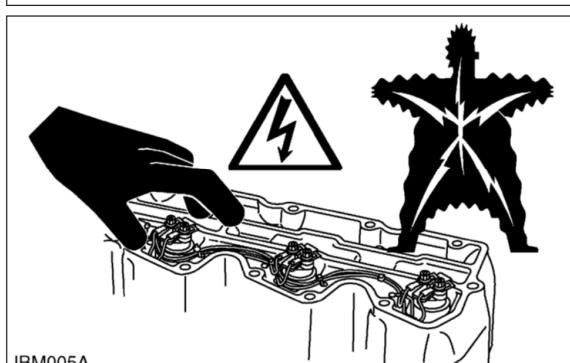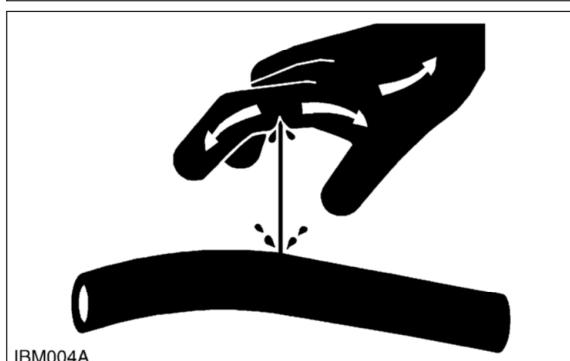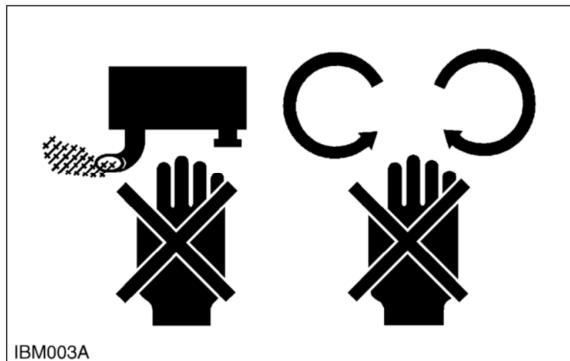

- Do not use the machine after you consume alcohol or medication or when you are tired.
- Put on applicable clothing and safety equipment.
- Use applicable tools only. Do not use alternative tools or parts.
- When 2 or more persons do servicing, make sure that you do it safely.
- Do not operate below the machine that only a jack holds. Always use a safety stand to hold the machine.
- Do not touch the hot parts or parts that turn when the engine operates.

- Do not remove the radiator cap when the engine operates, or immediately after it stops. If not, hot water can spout out from the radiator. Only remove the radiator cap when it is at a sufficiently low temperature to touch with bare hands. Slowly loosen the cap to release the pressure before you remove it fully.
- Released fluid (fuel or hydraulic oil) under pressure can cause damage to the skin and cause serious injury. Release the pressure before you disconnect hydraulic or fuel lines. Tighten all connections before you apply the pressure.
- Do not open a fuel system under high pressure. The fluid under high pressure that stays in fuel lines can cause serious injury. Do not disconnect or repair the fuel lines, sensors, or any other components between the fuel pump and injectors on engines with a common rail fuel system under high pressure.
- Put on an applicable ear protective device (earmuffs or earplugs) to prevent injury against loud noises.
- Be careful about electric shock. The engine generates a high voltage of more than DC100 V in the ECU and is applied to the injector.

4. Prevent a fire

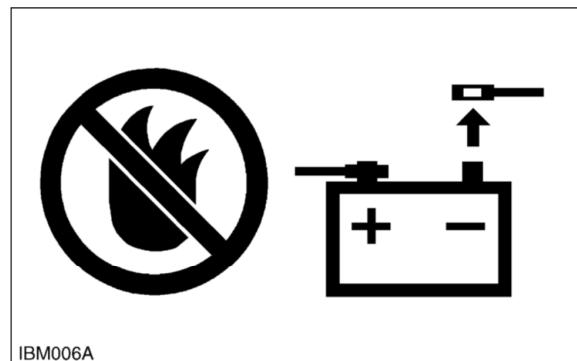

- Fuel is very flammable and explosive under some conditions. Do not smoke or let flames or sparks in your work area.
- To prevent sparks from an accidental short circuit, always disconnect the battery negative cable first and connect it last.
- The battery gas can cause an explosion. Keep the sparks and open flame away from the top of battery, especially when you charge the battery.
- Make sure that you do not spill fuel on the engine.

SAFETY FIRST

5. Keep a good airflow in the work area

1. INFORMATION

5. Keep a good airflow in the work area



IBM007A

- If the engine is in operation, make sure that the area has good airflow. Do not operate the engine in a closed area. The exhaust gas contains poisonous carbon monoxide.


6. Discard fluids correctly



IBM009A

- Do not discard fluids on the ground, down the drain, into a stream, pond, or lake. Obey related environmental protection regulations when you discard oil, fuel, coolant, electrolyte and other dangerous waste.

7. Prevent acid burns

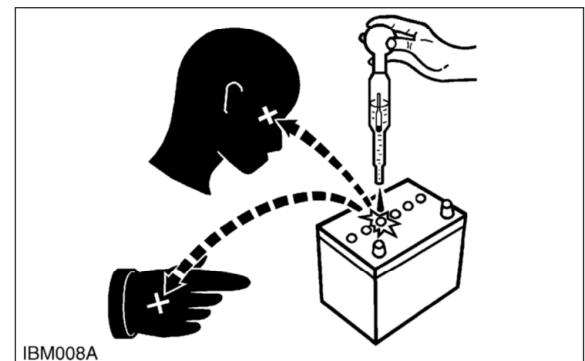

IBM008A

- Keep electrolyte away from your eyes, hands and clothing. Sulfuric acid in battery electrolyte is poisonous and it can burn your skin and clothing and cause blindness. If you spill electrolyte on yourself, clean yourself with water, and get medical aid immediately.

8. Preparing for emergencies



IBM010A



- Keep a first aid kit and fire extinguisher ready at all times.
- Keep emergency numbers near your telephone at all times.

1. INFORMATION
